SealHawk

CLONE STATION 48

INSTRUCTION **MANUAL**

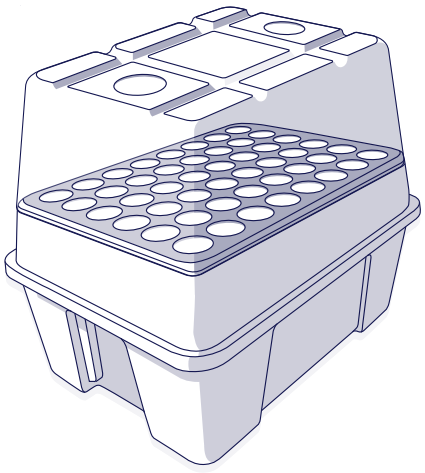

HOW TO ASSEMBLE YOUR PLANT CLONING MACHINE

1. Except for the water pump and sprayer manifold, rinse all parts in lukewarm water.
2. The orientation of the red sprayers is factory set for better spraying coverage ***(Figure A)***. If you feel that customization of the spray pattern is required; simply rotate the red sprayers as required.
3. Carefully fit the water pump onto spray manifold. To prevent breaking the manifold tube, avoid using excessive force.
4. Use the pump suction cups to adhere the pump to the base of the tub.
5. There is a mark in the centre of the tub base; place the pump into position as shown in ***Figure B*** (note the position of the power cord). Feed the power cord through the slot in the rim on the short side of the tub.
6. For a correct fit, place the lid on the base as per ***Figure C***, ensuring that it is watertight.
7. Before putting clones into the system, fill with water to a level just under the red sprayers in the tub, then place the lid back on. Turn on the machine to rinse all internal parts. Run for at least 5 minutes, then discard and replace the water.
   Repeat this procedure.

FIGURE A

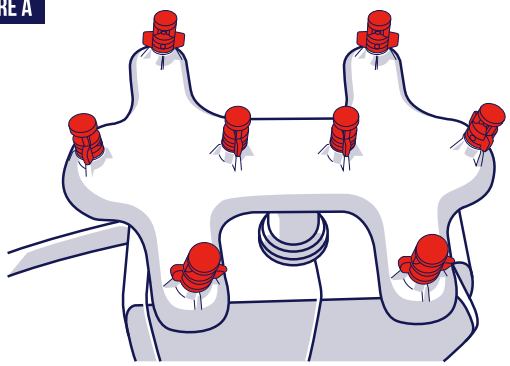

FIGURE B

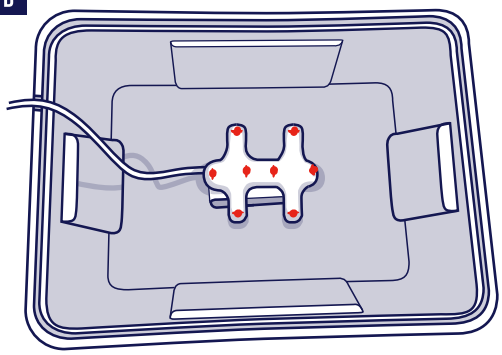

FIGURE C

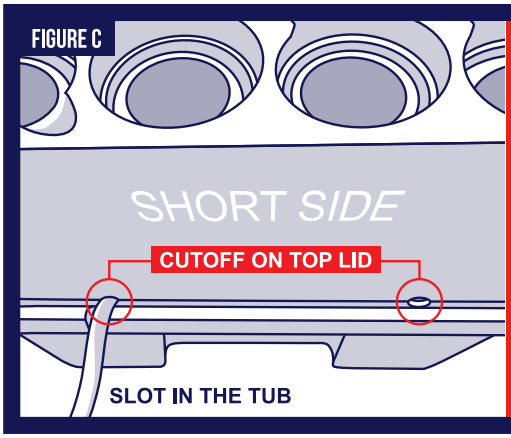

PLEASE DOUBLE CHECK YOUR ASSEMBLY TO ENSURE IT IS THE SAME AS FIGURE C BEFORE USING THE PRODUCT

FIGURE D
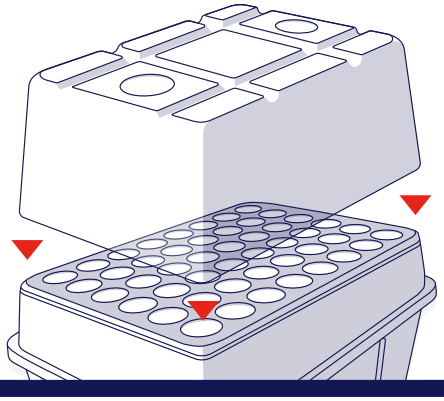
When ready, place clear humidity dome on top of unit and adjust air vents accordingly.